

Playing a course sureshotgps™

These instructions assume that a course has already been loaded in the sureshotgps - refer to the manual for instructions on how to do this.







Step ① Select Golf Course

Turn on the device outside at least 5-10 minutes before use. Press the menu key Select **play golf**.


Use the **up** and **down** arrows to select the course to be played.

Confirm selection by pressing **play**.

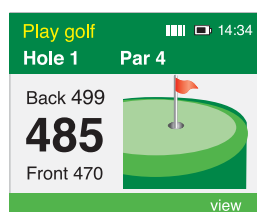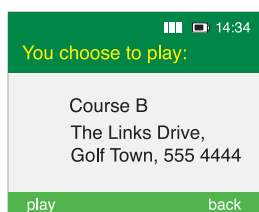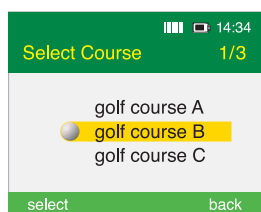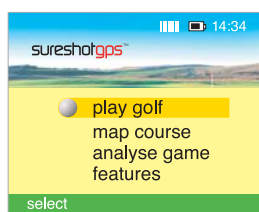

Step ② Play Golf

One of two views will be displayed; either distance to the centre of the green with distances to hazards on that hole or the distance to the front, centre or back of the green. A **red arrow** is displayed on the screen when there are more than **three** hazards for a hole.

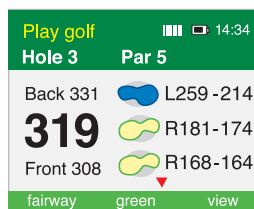

Step ③ Scoring

This feature is switched on or off from the Main Menu, Features, Setup, Scoring.

Press the **fairway** button to record fairway hit.

Press the **green** button when the green is hit in regulation.

Press the **view** button to change screens and record Putts and Sand saves.

Hold down the **view** button to display Penalties and Up/Down.





Press the **right arrow key** to display the Final Score screen.

Use the **up** and **down** arrows to increment/decrease score.

Press the **right arrow key** to move to the next hole.

Repeat the process for Play Golf and Scoring.

At any time the score card can be displayed by holding down the **down arrow key**.

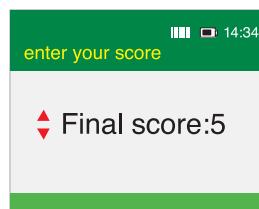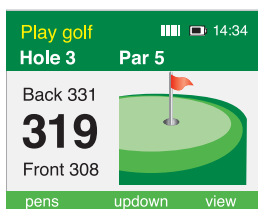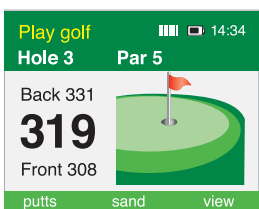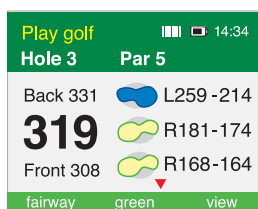

| | |
|-----------|----------------------------|
| Score: 36 | |
| Hole | 10 11 12 13 14 15 16 17 18 |
| Par | 4 4 4 3 4 5 3 4 5 |
| Score | 4 4 4 3 4 5 3 4 5 |
| front 9 | done |